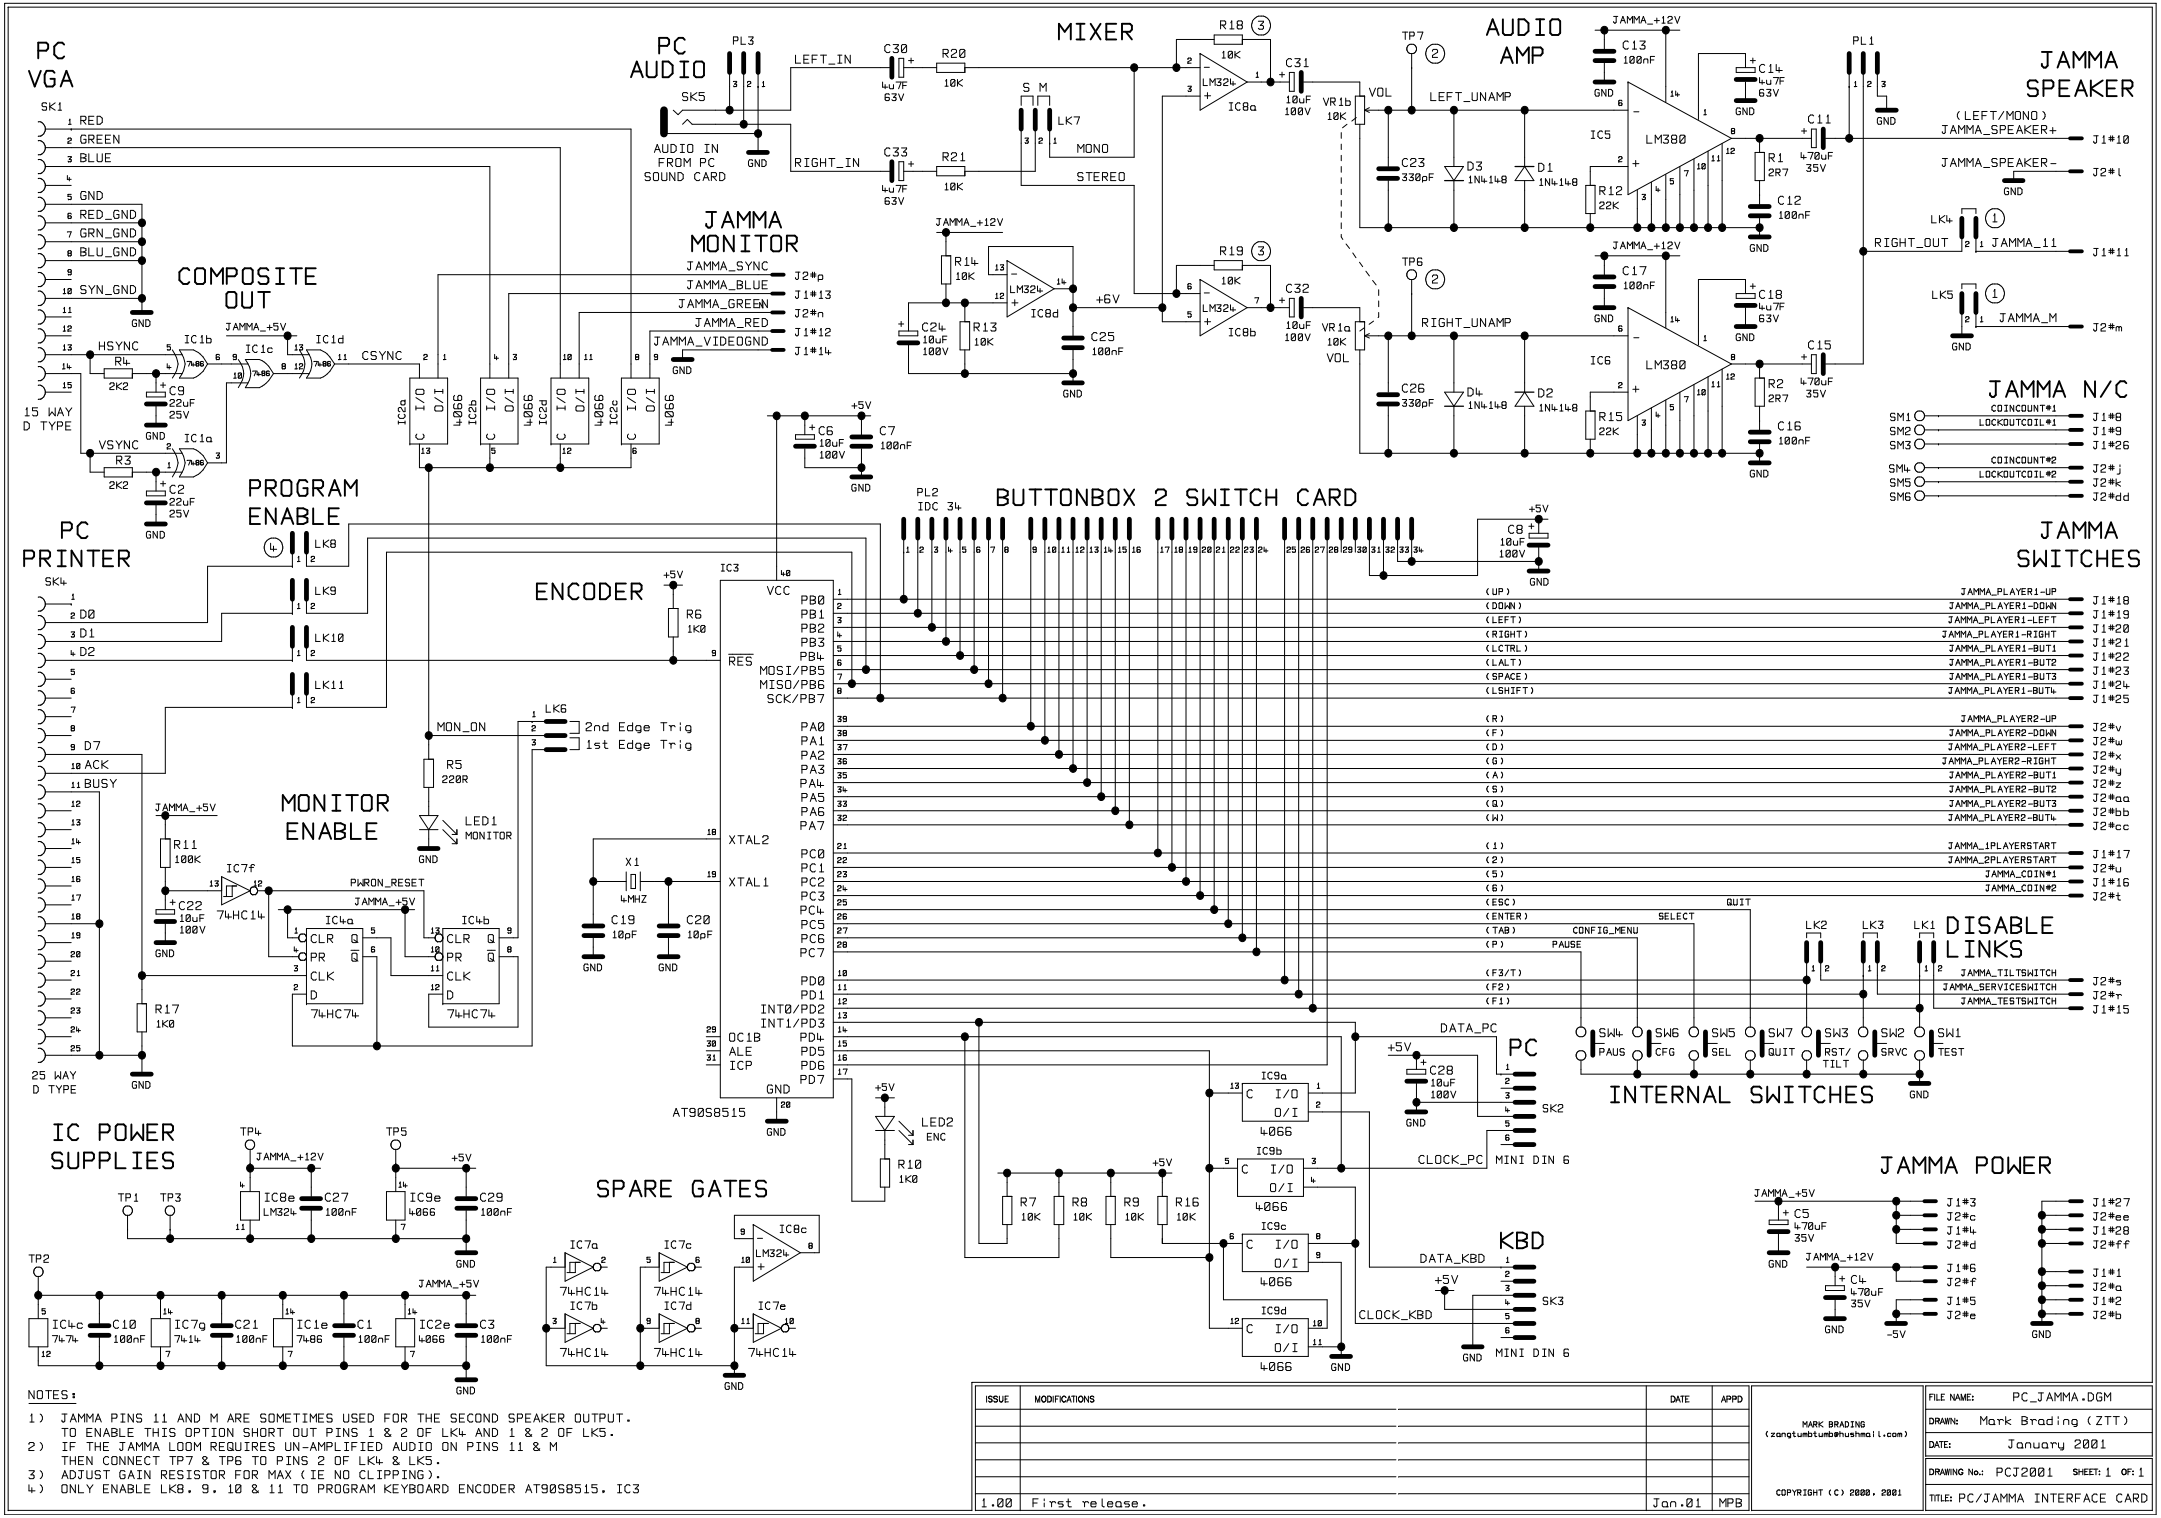

NOTES:

1) JAMMA PINS 11 AND M ARE SOMETIMES USED FOR THE SECOND SPEAKER OUTPUT. TO ENABLE THIS OPTION SHORT OUT PINS 1 & 2 OF LK4 AND 1 & 2 OF LK5.
2) IF THE JAMMA LOOM REQUIRES UN-AMPLIFIED AUDIO ON PINS 11 & M THEN CONNECT TP7 & TP6 TO PINS 2 OF LK4 & LK5.
3) ADJUST GAIN RESISTOR FOR MAX (IE NO CLIPPING).
4) ONLY ENABLE LK8. 9. 10 & 11 TO PROGRAM KEYBOARD ENCODER AT90S8515. IC3

ISSUE	MODIFICATIONS	DATE	APPD
1.00	First release.	Jan.01	MPB

MARK BRADING
(zangtumbtumb@hushmail.com)

COPYRIGHT (C) 2000, 2001

FILE NAME:	PC_JAMMA.DGM
DRAWN:	Mark Brading (ZTT)
DATE:	January 2001
DRAWING No.:	PCJ2001 SHEET: 1 OF: 1
TITLE:	PC/JAMMA INTERFACE CARD